

## Configuring a C-series Controller to Accept Telnet Connections (SRC CLI)

---

You can enable Telnet to let users who have the appropriate privileges connect to a C-series Controller. The system does not allow root access over a Telnet connection.

Use the following configuration statements to enable Telnet access from the [edit] hierarchy level:

```
system services {  
    telnet;  
}
```

To configure the C-series Controller to accept Telnet connections:

```
[edit]  
user@host# set system services telnet
```

