

## Initially Configuring the SAE

---

To initially configure the SAE:

- (Optional) Create a configuration group for the SAE.

See *Creating Grouped Configurations for the SAE (SRC CLI)*

- Configure local properties for the SAE.

See *Configuring Local Properties for the SAE (SRC CLI)*

- Configure a local IP address and NAS ID that the SAE uses to communicate with RADIUS servers.

See *Configuring the RADIUS Local IP Address and NAS ID (SRC CLI)*

- Configure directory connection properties for the SAE.
- Configure directory eventing properties for the SAE.

See *Configuring Initial Directory Eventing Properties for SRC Components*

