

Configuring the SAE Community Manager

To configure the SAE community manager that manages PCMM device communities:

1. Click **Configure**, expand **Shared > SAE**, and then expand the SAE group for which you want to manage PCMM devices.
2. In the side pane, expand **Configuration > External Interface Features: PCMMCommunityManager**, and then click **Community Manager**.

The Community pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

Related Topics ■ For information about setting up SAE groups, see [Configuring an SAE Group](#).

