

## Configuring TLS on the SAE

---

To configure TLS on the SAE:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver > JUNOS**, and then click **Security**.

The Security pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

