

Configuring the Remote Diameter Peer

Use the following configuration statements to configure the remote Diameter peer:

```
slot number ims aracf-rq peer primary-spdf {  
    address address;  
    origin-host origin-host;  
}
```

To configure the remote Diameter peer:

1. From configuration mode, access the configuration statement that configures the Diameter peer. In this sample procedure, the remote SPDF peer called primary-spdf is configured.

```
user@host# edit slot 0 ims aracf-rq peer primary-spdf
```

2. (Optional) Specify the IP address of the remote peer.

```
[edit slot 0 ims aracf-rq peer primary-spdf]  
user@host# set address address
```

3. (Optional) Specify the Diameter identifier for the remote endpoint that is the originator of the Diameter message.

```
[edit slot 0 ims aracf-rq peer primary-spdf]  
user@host# set origin-host origin-host
```

4. (Optional) Verify your configuration.

```
[edit slot 0 ims aracf-rq peer primary-spdf]  
user@host# show  
address 127.0.0.1;  
origin-host testclient;
```

