

Configuring the IMS Software

To configure the IMS software:

1. Configure initial properties, including the connection to the directory and directory monitoring properties.

See [Configuring Initial Properties for IMS](#).

See [Configuring Directory Connection Properties for IMS](#).

See [Configuring Initial Directory Eventing Properties for IMS](#).

2. Configure the local and remote Diameter peers.

See [Configuring the Local Diameter Peer](#).

See [Configuring the Remote Diameter Peer](#).

3. Configure logging destinations.

See [Configuring System Logging with SRC CLI](#) and [Configuring a Component to Store Log Messages in a File with SRC CLI](#).

4. Configure subscriber types.

See [Configuring the Subscriber Type](#).

5. Configure the NIC proxies.

See [Configuring a NIC Proxy for IMS](#).

6. Start the IMS process to provide the A-RACF Rq interface.

See [Starting the IMS Process](#).

You must restart the IMS process after you commit a configuration change. To restart IMS, see [Restarting the IMS Process](#).

