

Configuring Initial Properties for the SDX SNMP Agent

To configure properties for the SDX SNMP agent:

1. Click **Configure**, and expand **SNMP > Agent > Initial**.

The Initial pane appears.

2. Enter information as described in the Help text in the main pane, and then click **Apply**.

