

Configuring System Information for the SNMP Agent

To configure properties for the SNMP agent:

1. Click **Configure**, and expand **SNMP > Agent**.

The Agent pane appears.

2. Enter information as described in the Help text in the main pane, and then click **Apply**.

