

## Before You Begin Configuring the SRC Software on a C-series Controller

---

Before you begin configuring the SRC software on a C-series Controller, be sure that:

- You are familiar with how to use the SRC CLI.
  - Initial system setup and configuration have been completed, including configuration for:
  - C-series Controller hostname
  - Initial configuration for the Juniper Networks database and the database enabled on the system



**NOTE:** The Juniper Networks database must be running before you start configuring the SRC software.

---

- Domain name system
  - Eth0 interface
  - An administrative account that has superuser privileges
- 



**CAUTION:** Although root access is used for initial configuration of a C-series Controller, user accounts are used to enter commands and statements at the CLI.

---

- Telnet and or SSH access

### Related Topics

- *C-series Hardware Guide*
- Before You Start the SRC CLI

