


## Configuring the SAE Proxy Processor

To configure the SAE proxy processor:

1. In the VTA Configuration Manager navigation pane, select **Edit**.
2. Under Current Configuration, select **Processors**.

A list of processors appears.

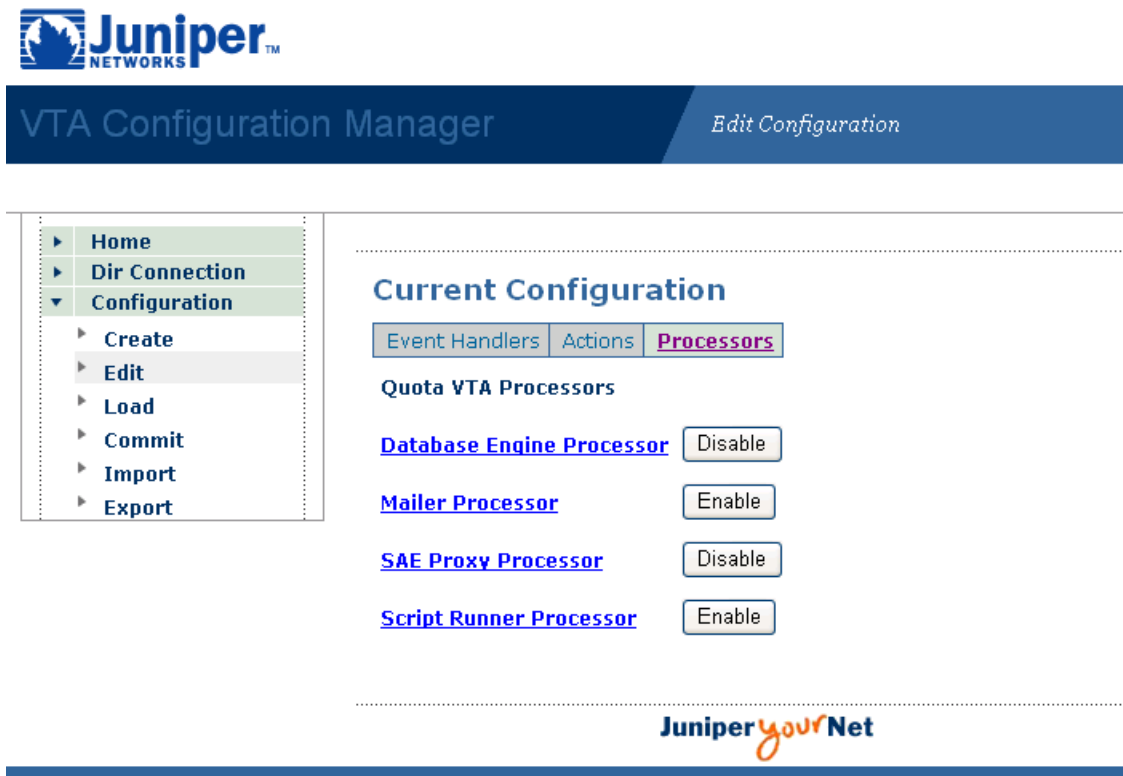

3. Click **Enable** next to SAE Proxy Processor to enable the processor.

The SAE Proxy Processor area appears.

- ▶ Home
- ▶ Dir Connection
- ▼ Configuration
  - ▶ Create
  - ▶ Edit
  - ▶ Load
  - ▶ Commit
  - ▶ Import
  - ▶ Export

### Current Configuration

Event Handlers Actions **Processors**

Quota VTA Processors

[SAE Proxy Processor](#)

Juniper your Net

4. There are no fields to configure for the SAE proxy processor, but you must configure actions for the processor. See [Configuring Actions for the SAE Proxy Processor](#).