

Setting the Directory for the SRC CLI

By default, on a C-series Controller the working directory is the home directory of the user. You can change your working directory for the CLI.

To change the current working directory,:

- Use the `set cli directory` command.

```
user@host> set cli directory directory
```

where *directory* is the pathname of working directory.

