

## Setting the Screen Width for the SRC CLI

---

Typically, the terminal used to access the C-series Controller controls the width of the screen. Although you can change the value for the screen width, if the terminal supports reporting the screen size, the screen size reported by the terminal takes precedence.

To change the width:

- Use the `set cli screen-width` command.

```
user@host> set cli screen-width width
```

