

Restarting the JPS

To restart the JPS:

```
user@host> restart component jps
```

The system responds with a start message. If the JPS is already running, the system responds with a shutdown message and then a start message.

