

Stopping a NIC Host on a C-series Controller (C-Web Interface)

If you run the NIC in client/server mode, you can stop the NIC host independently of the NIC proxy.

To stop a NIC host:

1. Click **Manage > Disable**.
2. In the Component list in the main pane, select **NIC**, and click **OK**.

Related Topics ■ Restarting the NIC (C-Web Interface)

