

Testing a NIC Resolution (C-Web Interface)

To test a NIC resolution:

1. Click **Diagnose > NIC > Resolve**.
2. Enter information as described in the Help text in the main pane, and click **OK**.

Related Topics ■ Configuring a NIC Scenario (C-Web Interface)

