

## Restarting the NIC (SRC CLI)

---

To restart a NIC host:

- From operational mode, restart the NIC.

```
user@host> request restart nic
```

You can also restart the NIC at the slot level.

- Related Topics**
- Stopping a NIC Host on a C-series Controller (SRC CLI)
  - Restarting a NIC Agent (SRC CLI)
  - Restarting a NIC Resolver (SRC CLI)

