

## Starting the NIC (C-Web Interface)

---

Start the NIC component before you configure a NIC configuration scenario.

To start the NIC component:

1. Select **Manage > Enable**.

The Enable pane appears.

2. In the Component box, select **NIC**, and click **OK**.

**Related Topics** ■ Before You Configure the NIC

