

Starting the IMS Process

To start the IMS process:

```
user@host> enable component ims
```

The system responds with a start message. If IMS is already running, the system responds with a warning message.

- Related Topics**
- Restarting the IMS Process
 - Stopping the IMS Process

