

Disabling an SRC Component

On a C-series Controller, you can disable a running SRC component from the CLI.

To disable a component:

1. Verify which components are running by entering the **show component** command in operation mode:

```
user@host> show component
Installed Components
Name      Version                                     Status
cli       Release: 7.0 Build: CLI.A.7.0.0.0171     running
acp       Release: 7.0 Build: ACP.A.7.0.0.0174     disabled
jdb       Release: 7.0 Build: DIRXA.A.7.0.0.0176   running
editor    Release: 7.0 Build: EDITOR.A.7.0.0.0176  disabled
redir     Release: 7.0 Build: REDIR.A.7.0.0.0176   disabled
licSvr    Release: 7.0 Build: LICSVR.A.7.0.0.0179  stopped
nic       Release: 7.0 Build: GATEWAY.A.7.0.0.0170  disabled
sae       Release: 7.0 Build: SAE.A.7.0.0.0166     running
www       Release: 7.0 Build: UMC.A.7.0.0.0169     disabled
jps       Release: 7.0 Build: JPS.A.7.0.0.0172     disabled
agent     Release: 7.0 Build: SYSMAN.A.7.0.0.0174  disabled
webadm    Release: 7.0 Build: WEBADM.A.7.0.0.0173  disabled
```

2. Disable a component by using the **disable component** command in operational mode. For example:

```
user@host> disable sae
```

