

Copying a Configuration for an Object (C-Web Interface)

You can copy configuration information from one place in the configuration to another. This process simplifies configuration so that you do not need to configure the same information in more than one place.

To copy a configuration to another configuration object:

1. In the side pane, select the object that contains the configuration to be copied.
2. In the main pane, click the **Copy** button.
3. In the side pane, select an object that represents the location of the new object.
4. In the main pane, click the **Paste** button.
5. At the prompt, enter the name for the new object.

The application creates a new object with the name you specified and copies the configuration to this object.

