

Viewing Congestion Point Information by Name

Purpose View congestion point information by name.

Action To display information about congestion points added through an external application by interface name:

```
user@host> show acp remote-update congestion-point name
```

To display information about congestion points connected from a specific device:

```
user@host> show acp remote-update congestion-point name device-name device-name
```

Enter a device name to list congestion points connected from a particular device.

To display information about specific subscribers connected from a specific interface:

```
user@host> show acp remote-update congestion-point name interface-name  
interface-name
```

Enter the interface name to list all matching congestion points connected from a particular interface.

To display congestion point DN:

```
user@host> show acp remote-update congestion-point name brief
```

By default, information about the congestion point attributes and congestion point bandwidth usage is displayed.

