

## Viewing Statistics for the SRC-ACP Directory

**Purpose** View statistics for the SRC-ACP directory.

**Action** To view statistics about the SRC-ACP directory:

1. Click **ACP > Statistics > Directory**.

The Statistics/Directory pane appears.

The screenshot shows the Juniper Networks configuration interface. At the top, there is a navigation bar with tabs: Monitor, Configure, Diagnose, and Manage. The 'Monitor' tab is selected. Below the navigation bar, there is a sidebar on the left with a list of components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The 'ACP' component is selected. The main content area displays the 'ACP Statistics / Directory' pane. This pane contains a 'Slot' input box with a value of '0'. To the right of the input box, there is a text area that reads: 'Number of the slot for which you want to configure values. Value: Currently, the chassis has only one slot. The valid value is 0. Default value: 0'. Below the input box and text area, there are 'OK' and 'Reset' buttons. At the bottom of the interface, there is a footer with copyright information: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper Your Net.'

2. In the Slot box, enter the number of the slot for which you want to display directory statistics.
3. Click **OK**.

The Statistics/Directory pane displays statistics for the SRC-ACP directory.

