

Viewing Device Statistics for SRC-ACP

Purpose View device statistics for SRC-ACP.

Action To view device statistics for SRC-ACP:

1. Click **ACP > Statistics > Device**.

The Statistics/Device pane appears.

The screenshot shows the Juniper Networks CLI interface. At the top, there are tabs for Monitor, Configure, Diagnose, and Manage. The Monitor tab is active, and the ACP section is expanded. The ACP Statistics / Device pane is displayed, showing three input fields: Filter, Slot, and Style. The Filter field is empty, the Slot field contains the value 0, and the Style field is set to detail. To the right of these fields are their respective descriptions and default values. At the bottom of the pane are OK and Reset buttons. The footer of the interface shows the copyright information for Juniper Networks, Inc. and the Juniper logo.

Field	Description	Value	Default
Filter	Name of the device.	All or part of the device name.	No value
Slot	Number of the slot for which you want to configure values.	Currently, the chassis has only one slot. The valid value is 0.	0
Style	Output style.	Choices: brief: Display only device names	detail

2. In the Filter box, enter a substring of the virtual router name, or leave the box blank to display information for all virtual routers.
3. In the Slot box, enter the number of the slot for which you want to display device statistics.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/Device pane displays router statistics for SRC-ACP.

