

## Viewing JPS CMTS Connections with the C-Web Interface

**Purpose** View information about the current JPS network connections for the CMTS device.

**Action** 1. Click **JPS > Statistics > CMTS > Connections**.

The Statistics/CMTS/Connections pane appears.

The screenshot shows the Juniper C-Web Interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS (highlighted), NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'JPS Statistics / CMTS / Connections'. It features an 'Ip Address' input field with a placeholder text box explaining its function: 'IP address for the CMTS device. Value: All or part of the IP address. If the IP address filter is not specified, all CMTS devices are selected. Default: No value'. Below the input field are 'OK' and 'Reset' buttons. The bottom of the interface shows the copyright notice for Juniper Networks, Inc. (2007) and the 'Juniper your Net.' logo.

2. In the IP Address box, enter the IP address, or leave the box blank to display all CMTS connections.
3. Click **OK**.

The Statistics/CMTS/Connections pane displays the CMTS connection statistics.

**Related Topics** ■ Overview of the JPS

