

## Viewing the System Date and Time (C-Web Interface)

**Purpose** View the system date and time.

**Action** Click **Monitor > Date**.

The Date pane displays the date and time of the system.



