

Viewing Agent Statistics

Purpose View statistics for an agent.

Action 1. Click **Monitor > NIC > Statistics > Agent**.

The Statistics/Agent pane appears.

The screenshot shows the Juniper Networks GUI. At the top, there is a navigation bar with tabs: Monitor (highlighted), Configure, Diagnose, and Manage. To the right of the tabs, it says "Logged in as: admin" and has links for Refresh, Preferences, About, and Logout. On the left side, there is a vertical menu with various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled "Statistics / Agent" and contains two input fields: "Name" and "Slot". The "Slot" field has the value "0" entered. Below these fields are "OK" and "Reset" buttons. At the bottom of the screen, there is a footer with copyright information: "Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy." and the Juniper logo with the tagline "Juniper your Net."

2. In the Name box, enter the name of the agent for which you want to view statistics.
3. In the Slot box, enter the number of the slot for which you want to display agent statistics.
4. Click **OK**.

The Statistics/Agent pane displays the properties for the agent.

