

Verifying Configuration for the NIC (SRC CLI)

Purpose After you complete the NIC configuration, verify the local NIC configuration and the NIC configuration scenario information.

Action To verify NIC configuration:

1. In configuration mode, run the **show** command at the [edit slot 0 nic] hierarchy level.

```
[edit slot 0 nic]  
user@host# show
```

2. In configuration mode, run the **show** command at the [edit shared nic scenario *name*] hierarchy level.

For example:

```
[edit shared nic scenario OnePop]  
user@host# show
```

- Related Topics**
- Configuring the NIC (SRC CLI)
 - Testing a NIC Resolution (SRC CLI)

