

Viewing Host Statistics

Purpose View NIC host statistics.

Action 1. Click **Monitor > NIC > Statistics > Host**.

The Statistics/Host pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC (highlighted), NTP, Redirect Server, Route..., SAE, Security, and System. The main content area is titled 'NIC Statistics / Host'. It contains a 'Slot' label followed by a text input box. Below the input box are 'OK' and 'Reset' buttons. The bottom of the interface shows the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display host statistics.
3. Click **OK**.

The Statistics/Host pane displays the properties for the host.

