

Verifying NTP Configuration on a C-series Controller

Purpose To verify the configuration for NTP.

Action At the [edit system ntp] hierarchy level, enter the **show** command. For example:

```
[edit system ntp]
user@host# show
boot-server 192.0.2.20;
multicast-client 192.0.2.15;
trusted-key 1;
server 192.0.2.30 key 1;
server 192.0.2.25;
authentication-key 1 {
    value *****;
}
```

- Related Topics**
- NTP Support on C-series Controllers
 - Specifying Which NTP Server a C-series Controller Contacts on Startup
 - Configuration Statements for NTP on C-series Controllers

