


## Viewing Statistics for the Redirect Server (C-Web Interface)

**Purpose** View statistics for the redirect server.

**Action** 1. Click **Monitor > Redirect Server > Statistics**.

The Statistics pane appears.

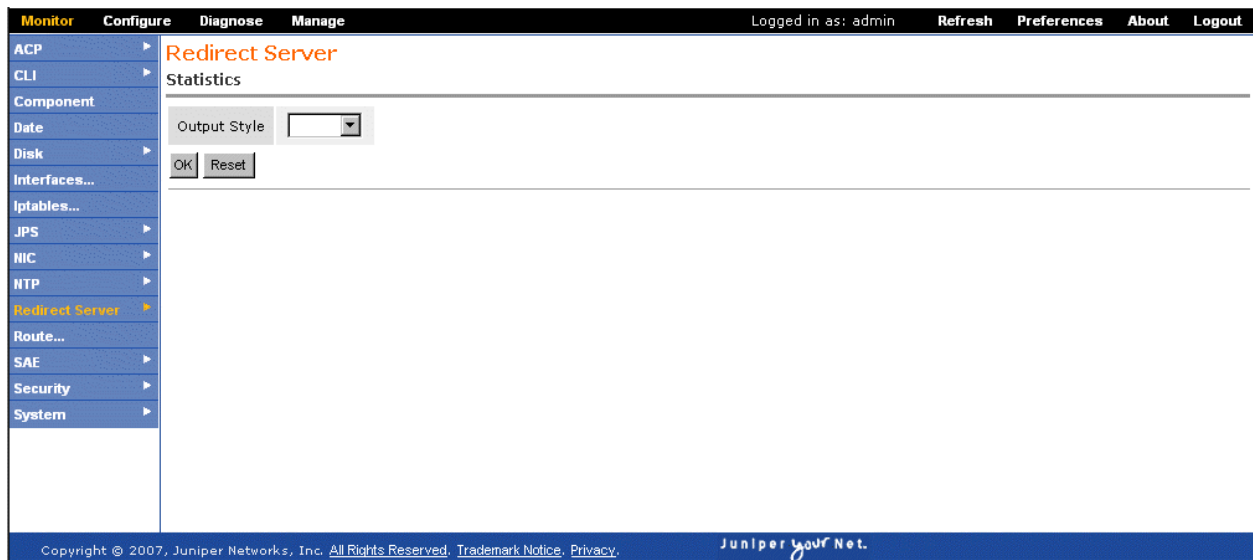

2. Select a style from the Output Style list.
3. Click **OK**.

The Statistics pane displays the redirect server statistics.

