

Viewing SNMP Statistics for the Directory

Purpose View SNMP statistics for the directory.

Action 1. Click **Monitor > SAE > Statistics > Directory**.

The Statistics/Directory pane appears.

The screenshot shows the Juniper SAE web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' menu is expanded, showing a list of components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE Statistics / Directory'. It contains a 'Slot' input field with a value of '0'. To the right of the input field is a text box that reads: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input field are 'OK' and 'Reset' buttons. The footer of the interface displays 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo with the tagline 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for the directory.
3. Click **OK**.

The Statistics/Directory pane displays statistics for the directory.

