

Viewing SNMP Statistics for Licenses by Device

Purpose View SNMP statistics for licenses by device.

Action 1. Click **Monitor > SAE > Statistics > License > Device**.

The Statistics/License/Device pane appears.

The screenshot shows the Juniper SAE configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various configuration categories: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE Statistics / License / Device'. It contains three input fields: 'Device Name' (a text box), 'Slot' (a text box), and 'Style' (a dropdown menu). To the right of these fields is a help section with the following text: 'Name of a device. Value: All or part of the device name. For JUNOS router drivers, use the format virtualRouterName@routerName. For JUNOS router drivers and PCMM drivers, use the format default@routerName. Default: No value'. Below the 'Slot' field, it says: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the 'Style' field, it says: 'Output style Choices: brief: Display only device names Default: Detail'. At the bottom of the form are 'OK' and 'Reset' buttons. The footer of the page shows the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo 'Juniper your Net.'

2. In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display SNMP statistics for all devices.

For JUNOS router drivers, use the format:

<virtual router name>@<router name>

For JUNOS router drivers and PCMM drivers, use the format:

default@<router name>

3. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for device licenses.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/License/Device pane displays statistics for virtual router licenses.

