

## Viewing Statistics for External Subscriber Monitor Event Notifications

**Purpose** View event notifications for the External Subscriber Monitor event notifications.

**Action** user@host> `show external-subscriber-monitor statistics event-notifications`

```
Notification Statistics
Number of ipUp events      8
Number of ipDown events   0
Number of ipUp sent       0
Number of ipDown sent     0
Number of ipUp dropped    0
Number of ipDown dropped  4
Number of ipUp queued     0
Number of ipDown queued   0
Number of IpUp retries    0
Number of ipDown retries  0
```

**Meaning** Table 1 on page 1 describes the output fields for the `show external-subscriber-monitor statistics event-notifications` command. Output fields are listed in the order in which they appear.

**Table 1: Output Fields for `show external-subscriber-monitor statistics event-notifications`**

Field Name	Field Description
Number of ipUp events	Total number of ipUp notification events received, including ipUp sent, ipUp dropped, and ipUp queued
Number of ipDown events	Total number of ipDown notification events received, including ipDown sent, ipDown dropped, and ipDown queued
Number of ipUp sent	Total number of ipUp notification events successfully sent
Number of ipDown sent	Total number of ipDown notification events successfully sent
Number of ipUp dropped	Total number of ipUp notification events dropped due to network failure or difficulties locating managed SAE
Number of ipDown dropped	Total number of ipDown notification events dropped due to network failure or difficulties locating managed SAE
Number of ipUp queued	Total number of ipUp notification events queued to send to SAE
Number of ipDown queued	Total number of ipDown notification events queued to send to SAE
Number of IpUp retries	Total number of ipUp notification events resent tries
Number of IpDown retries	Total number of ipDown notification events resent tries
Number of Nic lookup retries	Total number of NIC lookup retries

