

## Viewing Statistics for External Subscriber Event Notifications

---

**Purpose** View statistics for the External Subscriber Monitor notifications.

**Action** 1. Click **Monitor > Ext Sub Monitor > Statistics > Event Notification**.

The Statistics/Event Notification pane displays the event notification statistics for the External Subscriber Monitor.

