

Viewing Statistics for External Subscriber Monitor

Purpose View event notifications for External Subscriber Monitor.

Action user@host> `show external-subscriber-monitor statistics radius-accounting`

Client Statistics

Client Address	10.227.7.45
Number of accounting start received	4
Number of accounting stop received	0
Number of accounting interim received	0
Number of discarded accounting requests	0

Meaning Table 1 on page 1 describes the output fields for the `show external-subscriber-monitor statistics radius-accounting` command. Output fields are listed in the order in which they appear.

Table 1: Output Fields for show external-subscriber-monitor statistisc radius-accounting

Field Name	Field Description
Client Address	IP address of a RADIUS client. If not specified, displays statistics for all clients.
Number of accounting start received	Number of RADIUS start packets received.
Number of accounting stop received	Number of RADIUS stop packets received.
Number of accounting interim received	Number of RADIUS interim packets received.
Number of discarded accounting requests	Number of RADIUS packets discarded.

