

Reloading the SAE Data

You can reload specified configuration components. You can reload the SAE server's current configuration for:

- SAE configuration
- Services
- Subscriptions
- Interface classifiers
 - Domain map

Related Topics

- Viewing Information About SAE Interfaces with the CLI
- Viewing Information About SAE Device Drivers with the CLI
- Viewing Information About Services with the CLI
- Viewing Information About Policies on the SAE with the CLI

