

## **SRC Configuration Updates**

---

You can update the SRC configuration to include configuration changes from a file or to revert to the configuration supplied with the SRC product. You can also retain the active configuration and discard changes not yet committed. After you load one of these configurations, you can commit it to activate the configuration on the C-series Controller, or you can edit the configuration interactively using the CLI and commit it at a later time.

