

Configuring Initial Directory Eventing Properties for SRC-ACP

To configure initial directory eventing properties:

1. Click **Configure > Slot > Slot:0 > ACP > Initial > Directory Eventing**.

The Directory Eventing pane appears.

2. Enter information as described in the Help text in the main pane, and click **Apply**.

Related Topics ■ For more information about configuring local properties for the SRC components, see [Configuring Local Properties for the SAE \(SRC CLI\)](#).

