

Defining a Congestion Point Profile

You can create a congestion point profile that automatically performs congestion point classification. This profile supports only access network mode for SRC-ACP.

Use the following configuration statements to configure congestion point profiles:

```
shared congestion-points congestion-point-profile name {  
    expression [expression...];  
}
```

To define a congestion point profile:

1. From configuration mode, access the configuration statement that configures congestion point profiles.

```
user@host# edit shared congestion-points congestion-point-profile name
```

Enter a name for the profile.

2. Specify congestion point expressions.

```
[edit shared congestion-points congestion-point-profile name]  
user@host# set expression [expression...]
```

For information about congestion point expressions, see Congestion Point Expressions .

