

Modifying the Bandwidth Level

To modify a bandwidth level:

1. Start at the subscriber's Bandwidth page.
2. Disable all BoD services that this subscriber inherits from parent subscribers.
3. Disable all BoD services defined for this subscriber's subordinate subscribers.
4. Select a new value from the Bandwidth Level menu.
5. Click **Apply**.
6. If needed, enable BoD services that this subscriber inherits from parent subscribers.
7. If needed, enable BoD services defined for this subscriber's subordinate subscribers.

