

Assigning IP Addresses

To assign IP addresses to accesses manually:

1. Click the link to NAT Address Management Portal in the e-mail.

NAT Address Management Portal appears and displays the status of IP addresses for this link.

The screenshot shows the NAT Address Management Portal. At the top left is the 'virneo' logo with the tagline 'The network that keeps you surfing'. A blue header bar contains the text 'NAT Address Management'. Below the header is a breadcrumb trail: 'default > local > Acme > Boca > Primary'. The main content area is divided into three sections. The first section, 'Assigned IP Addresses', contains a yellow box with the text 'No public IP addresses have been assigned to this access link'. The second section, 'Released IP Addresses', contains a yellow box with the text 'No public IP addresses have been released by this access link'. The third section, 'Outstanding Requests for Public IP Addresses', contains a table with the following data:

Request Time	Number of Addresses	Must be Contiguous	
Jun 30, 2004 4:03 PM	1	false	<input type="button" value="Assign IPs"/>

At the bottom left of the page, it says 'Copyright Juniper Networks 2004'.

2. Click **Assign IPs**.

The Assign Public IP Addresses window appears.

The screenshot shows the 'Assign Public IP Addresses (Contiguous)' window. It has a title bar with the text 'Assign Public IP Addresses (Contiguous)'. Below the title bar is a table with the following data:

	IP Address
1	<input type="text"/>
2	<input type="text"/>
3	<input type="text"/>

At the bottom of the window is a yellow box with an 'Assign' button.

3. Enter an IP address in each line of this window.
4. Click **Assign**.

