

## Specifying Policy Server Identifiers in Messages

---

Use the following configuration statements to configure policy server identifiers for the JPS:

```
slot number jps {  
    policy-server-id policy-server-id;  
    use-psid-in-gate-commands;  
}
```

To configure policy server identifiers for the JPS:

1. From configuration mode, access the configuration statement that configures the policy server identifiers.

```
user@host# edit slot 0 jps
```

2. (Optional) Specify the policy server identifier so that the JPS can be identified in messages sent to CMTS devices.

```
[edit slot 0 jps]  
user@host# set policy-server-id policy-server-id
```

3. (Optional) Configure the JPS so that the policy server identifier is specified in messages sent to the RKS.

```
[edit slot 0 jps]  
user@host# set use-psid-in-gate-commands
```

When the JPS is communicating only with PCMM I03 CMTS devices, the value must be true. When the JPS is communicating with any pre-PCMM I03 CMTS devices, the value must be false.

4. (Optional) Verify your configuration.

```
[edit slot 0 jps]  
user@host# show
```

