

Configuring NIC Replication (C-Web Interface)

You configure NIC replication to keep the NIC configuration highly available.

Before you configure NIC replication:

- Make sure that you understand how NIC groups are used.
See [Locating Subscriber Management Information](#).
- Identify which NIC hosts are to provide redundancy for each other.
- Specify a name for a group for each of these hosts.

To configure NIC replication:

1. Click **Configure > Slot**, then a specified slot (for example, slot0), and then **NIC**.

The NIC pane appears.

2. Specify a group for NIC replication in the **Runtime Group** box, as described in the Help text; for example, group1.
3. Click **Apply**.
4. In the left pane, click **Commit**.

Related Topics

- [Locating Subscriber Management Information](#)
- [Configuring the NIC \(C-Web Interface\)](#)
- [Reviewing and Changing Operating Properties for NIC \(C-Web Interface\)](#)

