

Configuring NTP Authentication (C-Web Interface)

You can specify authentication keys for the various modes you configure for NTP.

To configure the authentication key for a mode:

- In the main pane, specify a key value for a mode.
 - Client mode—See [Specifying a Basic NTP Configuration on a C-series Controller \(C-Web Interface\)](#)
 - Server mode—See [Configuring NTP Client Mode for a C-series Controller \(C-Web Interface\)](#)
 - Broadcast mode—See [Configuring NTP Broadcast Mode on a C-series Controller \(C-Web Interface\)](#)
 - Symmetric active (peer) mode—See [Configuring an NTP Peer for a C-series Controller \(C-Web Interface\)](#)

- Related Topics**
- [NTP Support on C-series Controllers](#)
 - [Configuring NTP on a C-series Controller](#)
 - [Specifying an Authentication Key for NTP on C-series Controllers \(C-Web Interface\)](#)

