

## Configuring NTP as a Multicast Client on a C-series Controller (C-Web Interface)

---

To configure NTP to operate in multicast mode on a C-series controller:

1. Click **Configure**, expand **System > NTP**, and then click **Multicast Client**.

The Multicast Client pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- NTP Support on C-series Controllers
  - Configuring NTP on a C-series Controller

