

Configuring Loopback Interfaces for IPv4 (C-Web Interface)

Loopback interfaces are for private use only by software running on the C-series Controller, to communicate with other software also running on the same C-series Controller.

To configure a loopback interface for IPv4:

1. Click **Configure**, expand **Interfaces**, and then click **Interface: lo**.

The Interface:lo pane appears.

2. To specify the unit:
 - a. From the Create new list, select **Unit**.
 - b. In the dialog box, type a number for the new unit, and click **OK**.

The Unit: *< number >* appears in the side pane.

3. To specify an IPv4 address for the interface, expand **Unit: < number >**, and then expand **Family** in the side pane.
 - a. Click **Inet**.

The Inet pane appears.

- b. Click the **Create** button.
- c. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring Loopback Interfaces for IPv4 (C-Web Interface)
 - Configuring Gigabit Ethernet Interfaces for IPv4 (C-Web Interface)
 - Configuring Gigabit Ethernet Interfaces for IPv6 (C-Web Interface)
 - Configuring Tunnel Interfaces (C-Web Interface)

