

## Configuring the RADIUS Local IP Address and NAS ID with the C-Web Interface

---

To set the local RADIUS address and network access server (NAS ID):

1. Click **Configure**, and expand **Slot**.
2. Expand the slot for which you want to configure SAE, expand **SAE**, and then click **Radius**.

The Slot SAE pane appears.

3. Enter information as described in the Help text in the main pane, and click **Apply**.

