

Setting Parameter Values for Services (C-Web Interface)

Using parameters, you can define general settings in one SRC object and provide specific values for that setting in another object. For example, you can define the general settings for a rate limiter in a policy, insert a parameter for a rate in the policy, and provide specific values for the rate in each service that uses this policy.

To configure parameters for services:

1. Click **Configure**, and expand **Services**.
2. You can configure a parameter for services in the global service scope or in a service scope.
 - To configure a parameter for services in the global service scope, expand **Global**, and then expand the specified service.
 - To configure a parameter for services in the service scope, expand the specified scope and service.
3. Click **Parameter**.

The Parameter pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

Related Topics ■ *SRC-PE Services and Policies Guide*

