

## Configuring Notification Targets

---

To configure notification targets:

1. Click **Configure > SNMP > Notify**.

The Notify pane appears.

2. From the Create New box, select **Target**, enter the name of the target, and click **OK**.

The Target pane appears.

3. Enter information as described in the Help text in the main pane, and then click **Apply**.

