

Making Changes to the Configuration

You can change a configuration by entering a **set** command and providing a new value.

To change the value for the keepalive timer for aggregate services:

1. Navigate to the location in the hierarchy where properties for aggregate services are configured.

```
[edit]
user@host#
user@host# edit shared sae configuration aggregate-services
```

```
[edit shared sae configuration aggregate-services]
user@host#
```

2. Change the value for the keepalive timer.

```
[edit shared sae configuration aggregate-services]
user@host# set keepalive-time 150000
```

3. Verify the change.

```
[edit shared sae configuration aggregate-services]
user@host# show
keepalive-time 150000;
keepalive-retry-time 900;
activation-deactivation-time 900;
failed-notification-retry-time 9200;
```

4. Commit the change.

```
[edit shared sae configuration aggregate-services]
user@host# commit
commit complete
```

